

LEXMARK

Μελάνια: **L-LM100XL**

Συμβατοί εκτυπωτές:

Lexmark Impact **S305** / Lexmark Interpret **S402/S405** / Lexmark Intuition **S505** / Lexmark Interact **S602/S605** / Lexmark Genesis **S815** / Lexmark Prospect Pro **202/205** / Lexmark Prevail **Pro705** / Lexmark Prestige **Pro805** / Lexmark Pinnacle **Pro901** / Lexmark Platinum **Pro905**

Hewlett-Packard

Μελάνια: **EHP-364XL**

Συμβατοί εκτυπωτές:

HP Deskjet: **3070 / 3070A / 3070a** / e-all-in-one **3520** / e-all-in-one **3522 / D5445 / D5460 / D5463 / D5468**

HP Officejet: **4610 / 4620 / 4622**

HP Photosmart: **5510** / e-all-in-one **5510 / 5511 / 5512 / 5514 / 5515** / e-all-in-one **5515 / 5520 / 5522 / 6510 / 6510** / e-all-in-one **6512 / 6520 / 7510 / 7510** / e-all-in-one **7515 / 7520 / B010A / B010B / B109A / B109B / B109C / B109D / B109E / B109F / B109G / B109N / B110A / B110C / B110D / B110E / B110F / B209A / B209B / B209C / B210 / B210A / B210B / B210C / B210E / B410A / B410C / B8550 / B8850-Pro / C309G / C309A / C309N / C310A / C410A / C410B / C410C / C410D / C410E / C4610 / C510A / C5300 / C5324 / C5370 / C5373 / C5380 / C5383 / C5388 / C5390 / C5393 / C6300 / C6324 / C6380 / C7380 / D5445 / D5460 / D7500 / D7560 / CN245B / CQ521B / CN503B / CN216B / CN255B**

Μελάνια: **R-HP-300XL**

Συμβατοί εκτυπωτές:

HP Deskjet: **D1600 / D1660 / D1663 / D2500 / D2530 / D2545 / D2560 / D2563 / D2566 / D2600 / D2645 / D2660 / D2663 / D2666 / D2668 / D2680 / D5560 / D5563 / D5660 / D5663 / D5668 / F2410 / F2418 / F2420 / F2423 / F2430 / F2440 / F2476 / F2480 / F2483 / F2488 / F2492 / F2493 / F4200 / F4210 / F4213 / F4220 / F4224 / F4230 / F4235 / F4240 / F4250 / F4272 / F4273 / F4274 / F4275 / F4280 / F4283 / F4290 / F4292 / F4293 / F4294 / F4424 / F4435 / F4440 / F4450 / F4470 / F4472 / F4473 / F4480 / F4483 / F4488 / F4492 / F4500 / F4580 / F4583**

HP Photosmart: **C4635 / C4640 / C4650 / C4670 / C4673 / C4680 / C4683 / C4685 / C4688 / C4690 / C4740 / C4750 / C4780 / C4783 / C4785 / C4788 / C4793 / C4795 / C4799**

HP Envy **110** e-all-in-one / HP Envy **100 D410** e-all-in-one / HP Envy **110 D411** e-all-in-one / HP Envy **114 D411c** e-all-in-one / HP Envy **120** e-all-in-one / HP Envy **121** e-all-in-one

Μελάνια: **R-HP-339XL & R-HP-344**

Συμβατοί εκτυπωτές:

HP DeskJet **5740 / 5740xi / 5743 / 5745 / 5748 / 5793 / 5940 / 5940xi / 5943 / 5950 / 6520 / 6540 / 6540d / 6540dt / 6540xi / 6543 / 6545 / 6548 / 6620 / 6620xi / 6623 / 6628 / 6800 / 6830 / 6830V / 6840 / 6840dt / 6840xi / 6843 / 6848 / 6940 / 6940dt / 6943 / 6980 / 6980dt / 6983 / 6985 / 6988 / 6988dt / 6988XI / 9800 / 9800 series / 9800d / 9803 / 9803d / 9808 / 9808d / 9860 / 9868**

HP Officejet **7205 / 7208 / 7210 / 7210v / 7210xi / 7213 / 7215 / 7300 Series / 7310 / 7310xi / 7313 / 7400 Series / 7408 / 7410 / 7410xi / 7413 / K7100 / K7103 / Pro K7100 / Pro K7103 / Pro K7108**

HP Photosmart **2500 Series / 2570 / 2571 / 2573 / 2575 / 2575A / 2575v / 2575xi / 2577 / 2578 / 2600 Series / 2605 / 2608 / 2610 / 2610v / 2610xi / 2613 / 2615 / 2700 Series / 2710 / 2710v / 2710xi / 2713 / 8000 Series / 8030 / 8038 / 8049 / 8050 / 8050v / 8050xi / 8053 / 8100 Series / 8150 / 8150v / 8150w / 8150xi / 8153 / 8157 / 8400 Series / 8450 / 8450GP / 8450v / 8450w / 8450xi / 8453 / 8700 Series / 8750 / 8750gp / 8750xi / 8753 / 8758 / D5100 / D5145 / D5155 / D5160 / D5163 / D5168 / Pro B8300 Series / Pro B8330 / Pro B8338 / Pro B8350 / Pro B8353 PSC 2600 Series / 2610 / 2610V / 2610XI / 2710 / 2710XI**